# 2.0 A Negative Voltage Hot Swap Controller with Enhanced Programmability

The 34652 is a highly integrated -48 V hot swap controller with an internal Power MOSFET. It provides the means to safely install and remove boards from live -48 V backplanes without having to power down the entire system. It regulates the inrush current, from the supply to the load's filter capacitor, to a user-programmable limit, allowing the system to safely stabilize. A disable function allows the user to disable the 34652 manually or through a microprocessor and safely disconnect the load from the main power line.

The 34652 has active high and active low power good output signals that can be used to directly enable a power module load. Programmable under- and overvoltage detection circuitry monitors the input voltage to check that it is within its operating range. A programmable start-up delay timer ensures that it is safe to turn on the Power MOSFET and charge the load capacitor.

A two-level current limit approach to controlling the inrush current and switching on the load limits the peak power dissipation in the Power MOSFET. Both current limits are user programmable.

#### **Features**

- Integrated Power MOSFET and Control IC in a Small Outline Package
- Input Voltage Operation Range from -15 V to -80 V
- Programmable Overcurrent Limit with Auto Retry
- Programmable Charging Current Limit Independent of Load Capacitor
- · Programmable Start-Up and Retry Delay Timer
- Programmable Overvoltage and Undervoltage Detection
- · Active High and Low Power Good Output Signals
- Thermal Shutdown
- · Pb-Free Packaging Designated by Suffix Code EF

#### 34652

2.0 A NEGATIVE VOLTAGE HOT SWAP CONTROLLER WITH ENHANCED PROGRAMMABILITY



ORDERING INFORMATION					
Device Temperature Range (T <sub>A</sub> ) Package					
MC34652EF/R2 -40°C to 85°C 16 SOICN					

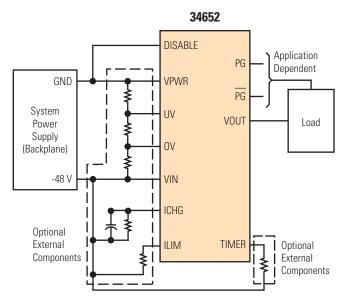


Figure 1. 34652 Simplified Application Diagram

<sup>\*</sup> This document contains certain information on a new product.

Specifications and information herein are subject to change without notice.





## INTERNAL BLOCK DIAGRAM

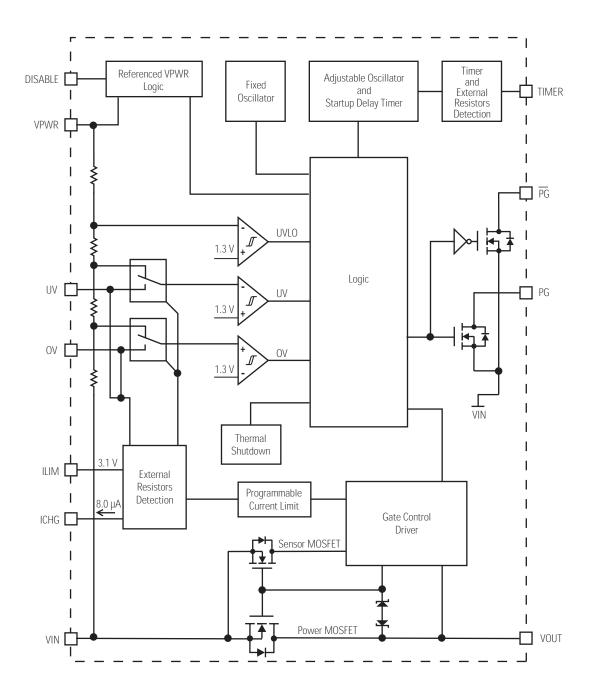
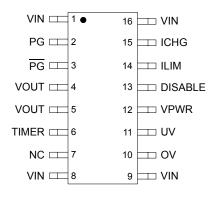


Figure 2. 34652 Simplified Internal Block Diagram

## **TERMINAL CONNECTIONS**



**Figure 3. 16-SOICN Terminal Connections** 

#### **Table 1. 16-SOICN Terminal Definitions**

A functional description of each terminal can be found in the FUNCTIONAL TERMINAL DESCRIPTION section beginning on page 9.

_	l	T	
Terminal	Terminal Name	Formal Name	Definition
1, 8, 9, 16	VIN	Negative Supply Input Voltage	This is the most negative power supply input. All terminals except DISABLE are referenced to this input.
2	PG	Power Good Output (Active High)	This is an active high power good output signal. This terminal is referenced to VIN.
3	PG	Power Good Output (Active Low)	This is an active low power good output signal. This terminal is referenced to VIN.
4, 5	VOUT	Output Voltage	This terminal is the drain of the internal Power MOSFET and supplies a current limited voltage to the load.
6	TIMER	Start-Up and Retry Delay Timer	This input is used to control the time base used to generate the timing sequences at start-up and the retry delay when the device experiences any fault.
7	NC	No Connect	Not connected.
10	OV	Overvoltage Control	This terminal is used to set the upper limit of the input voltage operation range.
11	UV	Undervoltage Control	This terminal is used to set the lower limit of the input voltage operation range.
12	VPWR	Positive Supply Input Voltage	This is the most-positive power supply input. The load connects between this terminal and the VOUT terminal.
13	DISABLE	Disable Input Control	This terminal is used to easily disconnect or connect the load from the main power line by disabling or enabling the 34652. It can also be used to reset the fault conditions that cause a "Power No Good" signal. This terminal is referenced to VPWR.
14	ILIM	Current Limit Control	This terminal is used to set the overcurrent limit during normal operation.
15	ICHG	Charging Current Limit Control	This terminal is used to set the load's input capacitor charging current limit, hence limiting the inrush current to a known constant value.

#### **MAXIMUM RATINGS**

#### **Table 2. Maximum Ratings**

All voltages are with respect to ground unless otherwise noted. Exceeding these ratings may cause a malfunction or permanent damage to the device.

Ratings	Symbol	Value	Unit
ELECTRICAL RATINGS	1	1	
Power Supply Voltage	V <sub>PWR</sub>	85	V
Power MOSFET Energy Capability	E <sub>MOSFET</sub>	Varies (1)	mJ
Continuous Output Current (2)	I <sub>O(CONT)</sub>	2.0	Α
Maximum Voltage			V
DISABLE Terminal	_	V <sub>IN</sub> - 0.3 to V <sub>PWR</sub> + 5.5	
UV Terminal	_	7.0	
OV, ILIM, ICHG, and TIMER Terminals	_	5.0	
PG Terminal (V <sub>PG</sub> - V <sub>IN</sub> )	_	85	
PG Terminal (V <sub>PG</sub> - V <sub>IN</sub> )	_	85	
All Terminals Minimum Voltage	_	-0.3	V
PG, PG Maximum Current	_	Internally Limited	Α
ESD Voltage, All Terminals			V
Human Body Model <sup>(3)</sup>	V <sub>ESD3</sub>	±2000	
Machine Model <sup>(4)</sup>	V <sub>ESD4</sub>	±200	
HERMAL RATINGS	<u> </u>	l l	
Storage Temperature	T <sub>STG</sub>	-65 to 150	°C
Operating Temperature			°C
Ambient (5)	$T_A$	-40 to 85	
Junction	T <sub>J</sub>	-40 to 160	
Peak Package Reflow Temperature During Solder Mounting (6)	T <sub>SOLDER</sub>	260	°C
Thermal Resistance <sup>(7), (8)</sup>			°C/W
Junction-to-Ambient, Single-Layer Board (9)	$R_{ heta JA}$	103	
Junction-to-Ambient, Four-Layer Board (10)	$R_{ heta JMA}$	65	

- 1. Refer to the section titled Power MOSFET Energy Capability on page 22 for a detailed explanation on this parameter.
- 2. Continuous output current capability so long as  $T_J$  is  $\leq 160^{\circ}C$ .
- 3. ESD1 testing is performed in accordance with the Human Body Model ( $C_{ZAP}$ =100pF,  $R_{ZAP}$ =1500  $\Omega$ ).
- 4. ESD2 testing is performed in accordance with the Machine Model ( $C_{ZAP}$ =200 pF,  $R_{ZAP}$ =0  $\Omega$ ).
- 5. The limiting factor is junction temperature, taking into account power dissipation, thermal resistance, and heatsinking.
- 6. Terminal soldering temperature limit is for 10 seconds maximum duration. Not designed for immersion soldering. Exceeding these limits may cause malfunction or permanent damage to the device.
- 7. Refer to the section titled Thermal Shutdown on page 15 for more thermal resistance values under various conditions.
- 8. The VOUT and VIN terminals comprise the main heat conduction paths.
- 9. Per SEMI G38-87 and JEDEC JESD51-2 with the single-layer board (JESD51-3) horizontal.
- Per JEDEC JESD51-6 with the board (JESD51-7) horizontal. There are no thermal vias connecting the package to the two planes in the board.

#### STATIC ELECTRICAL CHARACTERISTICS

#### **Table 3. Static Electrical Characteristics**

Characteristics noted under conditions 15 V  $\leq$  V<sub>PWR</sub>  $\leq$  80 V and -40°C  $\leq$  T<sub>A</sub>  $\leq$  85°C. All voltages are referenced to VIN unless otherwise noted.

Characteristic	Symbol	Min	Тур	Max	Unit
POWER SUPPLY TERMINAL (VPWR)					
Supply Voltage	V <sub>PWR</sub>	15	_	80	V
Supply Current, Device Enabled, Default Mode, Normal Operation (11)	I <sub>IN</sub>	_	900	1400	μΑ
Undervoltage Lockout Threshold (UVLO)					V
Rising	V <sub>UVLOR</sub>	7.0	8.0	9.0	
Falling	$V_{UVLOF}$	6.0	7.0	8.0	
Hysteresis	V <sub>UVLOHY</sub>	_	1.0	_	
UNDERVOLTAGE CONTROL					
UV Threshold (Default)					V
Rising	V <sub>UV(ON)</sub>	_	38	_	
Falling	V <sub>UV(OFF)</sub>	_	37	_	
Hysteresis	V <sub>UVHY</sub>	_	1.0	_	
UV Comparator Threshold					
Rising	V <sub>UVC</sub>	_	1.3	_	V
Hysteresis	V <sub>UVCHY</sub>	_	34	_	mV
UV Input Leakage Current	l <sub>UVLG</sub>	_	_	1.0	μΑ
Maximum Value of the Series Resistance Between UV and VPWR Terminals	_	_	_	500	kΩ
OVERVOLTAGE CONTROL		•	•		•
OV Threshold (Default)					V
Rising	V <sub>OV(OFF)</sub>	_	78	_	
Falling	V <sub>OV(ON)</sub>	_	76	_	
Hysteresis	V <sub>OVHY</sub>	_	2.0	_	
OV Comparator Threshold					
Rising	V <sub>OVC</sub>	_	1.3	_	V
Hysteresis	V <sub>OVCHY</sub>	_	34	_	mV
OV Input Leakage Current	l <sub>OVLG</sub>	_	_	1.0	μА
Maximum Value of the Series Resistance Between UV and VPWR Terminals	_	_	_	500	kΩ

- 11. The supply current depends on operation mode and can be calculated as follows:
  - •Start-Up Mode:  $I_{IN}$  = 539  $\mu$ A + 548  $\mu$  \*  $I_{CHG}(A)$  + 216  $\mu$  \*  $I_{LIM}(A)$  +  $V_{PWR}(V)$  / 460( $k\Omega$ )
  - •Normal Mode:  $I_{IN}$  = 539  $\mu$ A + 240  $\mu$  \*  $I_{LIM}(A)$  + 288  $\mu$  \*  $I_{LOAD}(A)$  +  $V_{PWR}(V)$  / 460( $k\Omega$ )
  - •Overcurrent Mode: I $_{IN}$  = 539  $\mu$ A + 612  $\mu$  \* I $_{LIM}$ (A) + V $_{PWR}$ (V) / 460(k $\Omega$ )
  - •Disable Mode: I  $_{\rm IN}$  = 539  $\mu \rm A$  + 240  $\mu$  \* I  $_{\rm LIM}(\rm A)$  + I  $_{\rm DIS}(\mu \rm A)$  + V  $_{\rm PWR}(\rm V)$  / 460(k $\Omega)$

Table 3. Static Electrical Characteristics (continued)

Characteristics noted under conditions 15 V  $\leq$  V<sub>PWR</sub>  $\leq$  80 V and -40°C  $\leq$  T<sub>A</sub>  $\leq$  85°C. All voltages are referenced to VIN unless otherwise noted.

Characteristic	Symbol	Min	Тур	Max	Unit		
DISABLE INPUT CONTROL TERMINAL (DISABLE) (12)							
DISABLE Input Voltage					V		
Inactive State	V <sub>DISL</sub>	V <sub>PWR</sub> -1.2	_	V <sub>PWR</sub> + 1.2			
Active State, Positive Signal	V <sub>DISHP</sub>	V <sub>PWR</sub> + 2.0	_	_			
Active State, Negative Signal	V <sub>DISHN</sub>	_	_	V <sub>PWR</sub> -2.0			
DISABLE Input Current	I <sub>DIS</sub>				μΑ		
$V_{DIS} = V_{PWR} + 3.3 V$		20	60	140			
$V_{DIS} = V_{PWR} - 3.3 V$		-20	-60	-140			
$V_{DIS} = V_{IN}$		-50	-150	-250			
CURRENT LIMIT CONTROL TERMINALS (ILIM, ICHG)	<u>.</u>						
Overcurrent Limit in Steady State	I <sub>LIM</sub>				Α		
Default		_	1.0	_			
Maximum with External Resistor		_	2.25	_			
Minimum with External Resistor		_	0.15	_			
Current Limit During Start-Up	I <sub>CHG</sub>				Α		
Default		_	0.1	_			
Maximum with External Resistor		_	0.5	_			
Minimum with External Resistor		_	0.05	_			
Short Circuit Current Limit	I <sub>SHORT</sub>	_	5.0	_	Α		
I <sub>LIM</sub> Current Limit Hysteresis	I <sub>LIMHY</sub>	_	12	_	%		
I <sub>LIM</sub> Current Limit Accuracy	I <sub>LIMCLA</sub>	-20	_	20	%		
I <sub>CHG</sub> Current Limit Accuracy	I <sub>CHGCLA</sub>	-35	_	35	%		
ILIM Terminal Voltage	V <sub>ILIM</sub>	_	3.1	_	V		
I <sub>LIM</sub> to R <sub>ILIM</sub> Setting Constant	I <sub>LIMCNS</sub>	_	129	_	A * kΩ		
I <sub>CHG</sub> Reference Current	I <sub>CHGOUT</sub>	_	-8.0	_	μΑ		
I <sub>CHG</sub> to R <sub>ICHG</sub> Setting Constant	I <sub>CHGCNS</sub>	_	335	_	kΩ/A		
POWER GOOD OUTPUT TERMINALS (PG, PG) (13)	<u>.</u>						
Power Good Output Low Voltage	V <sub>PGL</sub>				V		
$I_{PG}$ or $I_{\overline{PG}}$ = 1.6 mA		-	_	0.5			
Power Good Leakage Current	I <sub>PGLG</sub>	_	_	10	μΑ		
Power Good Current Limit	I <sub>PGCL</sub>				mA		
$V_{PG}$ or $V_{\overline{PG}} = 3.0 \text{ V}$			_	7.0			

- 12. Referenced to VPWR.
- 13. Referenced to VIN.

# Table 3. Static Electrical Characteristics (continued)

Characteristics noted under conditions 15 V  $\leq$  V<sub>PWR</sub>  $\leq$  80 V and -40°C  $\leq$  T<sub>A</sub>  $\leq$  85°C. All voltages are referenced to VIN unless otherwise noted.

Characteristic	Symbol	Min	Тур	Max	Unit	
START-UP AND RETRY DELAY TIMER (TIMER)						
TIMER Terminal Voltage	V <sub>TIMER</sub>	_	1.3	_	V	
OUTPUT VOLTAGE TERMINAL (VOUT)						
VOUT Leakage Current	I <sub>OUTLG</sub>	_	_	50	μΑ	
POWER MOSFET						
ON Resistance @ 25°C	R <sub>DS(ON)</sub>	_	144	_	mΩ	
THERMAL SHUTDOWN	THERMAL SHUTDOWN					
Thermal Shutdown Temperature	T <sub>SD</sub>	_	160	_	°C	
Thermal Shutdown Temperature Hysteresis	T <sub>SDHY</sub>	_	25	_	°C	

## **DYNAMIC ELECTRICAL CHARACTERISTICS**

## **Table 4. Dynamic Electrical Characteristics**

Characteristics noted under conditions 15 V  $\leq$  V<sub>PWR</sub>  $\leq$  80 V and -40°C  $\leq$  T<sub>A</sub>  $\leq$  85°C. All voltages are referenced to VIN unless otherwise noted.

Characteristic	Symbol	Min	Тур	Max	Unit
UNDERVOLTAGE CONTROL					•
UV Active to Gate Low Filter Time	t <sub>UVAL</sub>	_	1.0	_	ms
OVERVOLTAGE CONTROL					•
OV Active to Gate Low Filter Time	t <sub>OVAL</sub>	_	1.0	_	ms
DISABLE INPUT CONTROL TERMINAL (DISABLE) (14)					•
DISABLE Active to Gate Low Filter Time	t <sub>DISAL</sub>	_	1.0	_	ms
CURRENT LIMIT CONTROL TERMINALS (ILIM, ICHG)		•	1	1	•
Short Circuit Protection Delay	t <sub>SCPD</sub>	_	_	10	μs
Overcurrent Limit Filter Time	t <sub>OCFT</sub>	_	100	_	μs
Overcurrent Limit Regulation Time	t <sub>OC</sub>	_	3.0	_	ms
I <sub>CHG</sub> Rise Time	t <sub>ICHGR</sub>				ms
Default		_	1.0	_	
Adjustable with an External Capacitor		1.0	_	_	
POWER GOOD OUTPUT TERMINALS (PG, PG) (15)					
Power Good Output Delay Time, from Power MOSFET Enhancement to PG	t <sub>PG</sub>				ms
and PG Asserted		10	28	46	
START-UP AND RETRY DELAY TIMER (TIMER)					
Start-Up and Retry Delay Timer	t <sub>TIMER</sub>				ms
Default		130	200	270	
Maximum with External Resistor		_	1000	_	
Minimum with External Resistor		_	100	_	

- 14. Referenced to VPWR.
- 15. Referenced to VIN.

#### **FUNCTIONAL DESCRIPTION**

#### **INTRODUCTION**

Most telecom and data transfer networks require that circuit boards be inserted and removed from the system without powering down the entire system. When a circuit board is inserted into or removed from a live backplane, the filter or bypass capacitors at the input of the board's power module or switching power supply can cause large transient currents when being charged or discharged. These currents can cause severe and permanent damage to the boards, thus making the system unstable. Figure 4 displays the inrush current to the filter capacitor if a hot swap device is absent. The inrush current reached an unsafe value of more than 55 A.

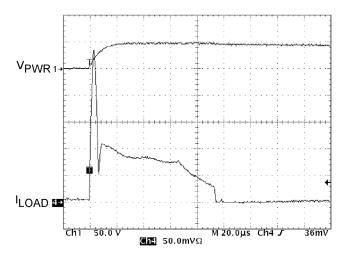


Figure 4. Circuit Board Insertion Without a Hot Swap Device, Inrush Current Not Limited

The 34652 is an integrated negative voltage hot swap controller with an internal Power MOSFET. The 34652 resides on the plug-in boards and allows the boards to be safely inserted or removed by powering up the supply

voltages in a controlled manner and regulating the inrush current to a user-programmable limit, thus allowing the system to safely stabilize (see <a href="Figure 5">Figure 5</a>). The 34652 provides protection against overcurrent, undervoltage, overvoltage, and overtemperature. Furthermore, it protects the system from short circuits.

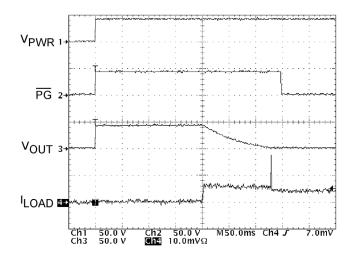


Figure 5. Circuit Board Insertion With the Hot Swap Device, Inrush Current Limited

By integrating the control circuitry and the Power MOSFET switch into a space-efficient package, the 34652 offers a complete, cost-effective, and simple solution that takes much less board space than a similar part with an external Power MOSFET requires.

The 34652 can be used in -48 V telecom and networking systems, servers, electronic circuit breakers, -48 V distributed power systems, negative power supply control, and central office switching.

#### **FUNCTIONAL TERMINAL DESCRIPTION**

#### **NEGATIVE SUPPLY INPUT VOLTAGE (VIN)**

The VIN terminal is the most negative power supply input. All terminals except the DISABLE terminal are referenced to this input.

#### POWER GOOD OUTPUT (ACTIVE HIGH) (PG)

The PG terminal is the active high power good output signal that is used to enable or disable a load. This signal goes active after a successful power-up sequence and stays active as long as the device is in normal operation and is not experiencing any faults.

The signal is deactivated under the following conditions:

- · Power is turned off.
- The device is disabled for more than 1.0 ms.
- The device exceeded its thermal shutdown threshold for more than 12  $\mu s$ .
- The device is in overvoltage or undervoltage mode for more than 1.0 ms.
- Load current exceeded the overcurrent limit for more than 3.0 ms.

This terminal is referenced to VIN.

## POWER GOOD OUTPUT (ACTIVE LOW) (PG)

The  $\overline{PG}$  terminal is the active low power good output signal that is used to enable or disable a load. This signal goes active after a successful power-up sequence and stays active as long as the device is in normal operation and is not experiencing any faults.

The signal is deactivated under the following conditions:

- · Power is turned off.
- · The device is disabled for more than 1.0 ms.
- The device exceeded its thermal shutdown threshold for more than 12 μs.
- The device is in overvoltage or undervoltage mode for more than 1.0 ms.
- Load current exceeded the overcurrent limit for more than 3.0 ms.

This terminal is referenced to VIN.

#### **OUTPUT VOLTAGE (VOUT)**

The VOUT terminal is the drain of the internal Power MOSFET and supplies a current-limited voltage to the load. The load connects between the VOUT and VPWR terminals.

#### START-UP AND RETRY DELAY TIMER (TIMER)

This input is used to control the time-base used to generate the timing sequences at start-up and the retry delay when the device experiences any fault. The TIMER terminal can be left unconnected for a default timer value of 200 ms or the user can connect a resistor between this terminal and the VIN terminal to set the timer value externally. The timer value can vary between 100 ms and 1000 ms.

#### **OVERVOLTAGE CONTROL (OV)**

The OV terminal is used to set the upper limit of the input voltage operation range. If the OV terminal voltage goes above the overvoltage threshold value, the device turns off the internal Power MOSFET and deactivates the two power good outputs, PG and PG. The Power MOSFET stays off until the OV drops below the threshold value. The overvoltage detection circuit has a 1.0 ms filter timer.

The OV terminal can be left unconnected for the typical default threshold value of 78 V or the user can set the threshold value externally with a simple voltage divider using resistors between the VPWR and VIN terminals.

#### **UNDERVOLTAGE CONTROL (UV)**

The UV terminal is used to set the lower limit of the input voltage operation range. If the UV terminal voltage goes below the undervoltage threshold value, the device turns off the internal Power MOSFET and deactivates the two power good outputs, PG and  $\overline{\text{PG}}$ . The Power MOSFET stays off until the UV rises above the threshold value. The undervoltage detection circuit has a 1.0 ms filter timer.

The UV terminal can be left unconnected for the typical default threshold value of 37 V or the user can set the threshold value externally with a simple voltage divider using resistors between the VPWR and VIN terminals.

#### POSITIVE SUPPLY VOLTAGE INPUT (VPWR)

The VPWR terminal is the most-positive power supply input. The load connects between the VPWR and VOUT terminals.

#### **DISABLE INPUT CONTROL (DISABLE)**

The DISABLE terminal is used to easily disconnect or connect the load from the main power line by disabling or enabling the 34652. It can also be used to reset the fault conditions that cause a "Power No Good" signal.

If left open or connected to VPWR, the DISABLE terminal is inactive and the device is enabled. If a positive voltage (above  $V_{PWR}$ ) or a negative voltage (below  $V_{PWR}$ ) is applied to DISABLE, it is active and the device is disabled. The disable function has a 1.0 ms filter timer.

This terminal is referenced to VPWR.

#### **CURRENT LIMIT CONTROL (ILIM)**

The ILIM terminal is used to set the overcurrent limit during normal operation. This terminal can be left unconnected for a default overcurrent limit value of 1.0 A or the user can connect an external resistor between the ILIM and VIN terminals to set the overcurrent limit value. This value can vary between 0.15 A and 2.25 A. The overcurrent detection circuit has a 100  $\mu s$  filter timer.

#### **CHARGING CURRENT LIMIT CONTROL (ICHG)**

The ICHG terminal is used to set the current limit that is used to charge the load's input capacitor, hence limiting the inrush current to a known constant value. This terminal can be left unconnected for a default charging current limit value of 0.1 A and a default  $I_{CHG}$  rise time of 1.0 ms. Or the user can connect an external resistor between the ICHG and VIN terminals to set the current limit value between 0.05 A and 0.5 A and an external capacitor to increase the  $I_{CHG}$  rise time. The recommended maximum rise time is 10 ms.

#### **FUNCTIONAL DEVICE OPERATION**

#### **OPERATIONAL MODES**

#### START-UP SEQUENCE

When power is first applied to the 34652 by connecting the VIN terminal to the negative voltage rail and the VPWR terminal to the positive voltage rail, the 34652 keeps the Power MOSFET turned off, deactivates the power good output signals, and resets the retry counter. If the device is disabled, no further activities will occur and power-up would not start. If the device is enabled, it starts to establish an internally regulated supply voltage required for the internal circuitry. The Power MOSFET will stay off until the start of the charging process.

After Power-ON Reset (POR) and once the Undervoltage Lockout (UVLO) threshold is cleared, the 34652 checks for external components on four terminals—the UV, the ILIM, the ICHG, and 128  $\mu s$  later the OV—to set the levels of the Undervoltage Threshold, the Overcurrent Limit, the Charging Current Limit, and the Overvoltage Threshold, respectively. The device also checks for external components on the TIMER terminal to decide on the Start-Up and Retry Delay Timer value, and the device keeps checking the TIMER terminal continuously throughout the operation.

The device then initiates the start-up timer (Point A in Figure 6) and checks for the start-up conditions (see next paragraph). The duration of the timer is either a default or a user-programmable value. For undervoltage and overvoltage faults during power up the 34652 retries infinitely until normal input voltage is attained. If the die temperature ever increased beyond the thermal shutdown threshold or the device is disabled, then the start-up timer resets and the retry counter increments. If after 10 retries the die temperature is still high and the device is still disabled, the 34652 will not retry again and the power in the device must be recycled or the device must be disabled to reset the retry counter.

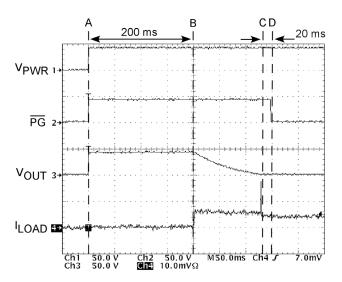


Figure 6. Start-Up Sequence

#### **Start-Up Conditions**

The start-up conditions are as follows:

- Input voltage is below the overvoltage turn-off threshold.
   This threshold is either a default or user-programmable value.
- Input voltage is above the undervoltage turn-off threshold.
   This threshold is either a default or user-programmable value.
- Die temperature is less than thermal shutdown temperature.
- · Device is enabled.

If the start-up conditions are satisfied for a time equal to the length of the start-up timer and the retry counter is less than or equal to 10, the device starts to turn on the Power MOSFET gradually to control the inrush current that charges up the load capacitor to eventually switch on the load (Point B in Figure 6).

#### **Charging Process**

When charging a capacitor from a fixed voltage source, a definite amount of energy will be dissipated in the control circuit, no matter what the control algorithm is. This energy is equal to the energy transferred to the capacitor— $\frac{1}{2}$ CV $^2$ . With this in mind, the Power MOSFET in the 34652 cannot absorb this pulse of energy instantaneously, so the pulse must be dissipated over time. To limit the peak power dissipation in the Power MOSFET and to spread out the duration of the energy dissipation in the Power MOSFET, the circuit uses a two-level current approach to controlling the inrush current and switching on the load as explained in the following paragraphs.

When the Power MOSFET is turned on, the current limit is set gradually from 0 A to  $I_{CHG}$  (between Points A and B in Figure 7, page 12). The low charging current value and the gradual rise time of  $I_{CHG}$  are either defaults or they can be user programmable (2.0 ms rise time in the example in Figure 7). The low charging current value of  $I_{CHG}$  is intended to limit the temperature increase during the load capacitor charging process, and the gradual rise to  $I_{CHG}$  is to prevent transient dips in the input voltage due to sharp increases in the current. This prevents the input voltage from drooping due to current steps acting on the input line inductance, and that in turn prevents a premature activation of the UV detection circuit.

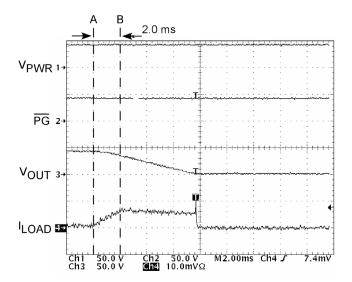


Figure 7. Power MOSFET Turn-On and the Gradual Increase in the Charging Current from 0 A to I<sub>CHG</sub> (2.0 ms in Example)

The  $I_{CHG}$  current charges up the load capacitor relatively slowly. When the load capacitor is fully charged, the Power MOSFET reaches its full enhancement, which triggers the current limit detection to change from  $I_{CHG}$  to  $I_{LIM}$  and the load current to decrease (Point C in Figure 6, page 11). The current spike at Point C in Figure 6 is better displayed in Figure 8. We can see that when the  $|V_{OUT} - V_{IN}| < 0.5 \text{ V}$ , the Power MOSFET fully turns on to reach its full enhancement, charging the capacitor an additional 0.5 V with a higher current value that quickly ramps down. This eliminates the need for a current slew rate control because the hazard for a voltage change is less than 0.5 V. The power good output signals activate after a 20 ms delay (Point D in Figure 6), which in turn enables the load. The 34652 is now in normal operation mode and the retry counter resets.

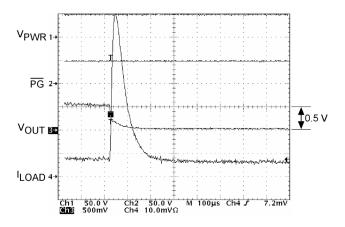


Figure 8. Full Power MOSFET Turn-On and Current Spike Associated with It. End of Charging Process

#### **NORMAL MODE**

If one of the start-up conditions (list on page 11) is violated any time from the start of the Power MOSFET enhancement process and thereafter during normal operation, the Power MOSFET turns off and the power good output signals deactivate, disabling the load, and a new timer cycle starts as explained previously. The 34652 also monitors the load current to prevent any overload or short circuit conditions from happening in order to protect the load from damage.

#### LOAD CURRENT CONTROL

When in normal operation mode, the 34652 monitors the load and provides two modes of current control as explained in the paragraphs below.

#### **Overcurrent Mode**

The 34652 monitors the load for overcurrent conditions. If the current going through the load becomes larger than the overcurrent limit for longer than the overcurrent limit filter timer of 100 us, the overcurrent signal is asserted and the gate of the Power MOSFET is discharged to try to regulate the current at the I<sub>LIM</sub> value (Point A in Figure 9). The 34652 is in overcurrent mode for 3.0 ms. If after a 3.0 ms filter timer the device is still in overcurrent mode, the device turns off the Power MOSFET and deactivates the power good output signals (Point B in Figure 9). The 34652 then initiates another start-up timer and goes back through the enhancement process. If during the 3.0 ms timer the fault was cleared, then the 34652 goes back to the normal operation mode and the power good output signals stay activated as shown in Figure 10, page 13. This way the device overcomes temporary overcurrent situations and at the same time protects the load from a more severe overcurrent situation.

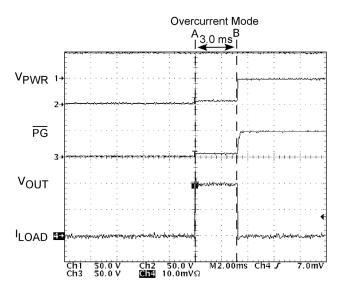


Figure 9. Overcurrent Mode for More Than 3.0 ms

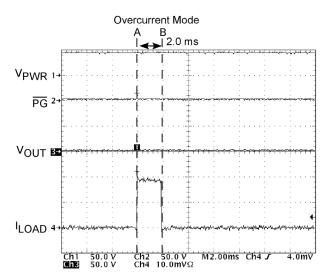


Figure 10. Overcurrent Mode for Less Than 3.0 ms

#### **Short Circuit Mode**

If the current going through the load becomes > 5.0 A, the Power MOSFET is discharged very fast (in less than 10  $\mu s$ ) to try to regulate the current at the  $I_{LIM}$  value, and the 34652 is in the overcurrent mode for 3.0 ms. Then it follows the pattern outlined in the Overcurrent Mode paragraph above.

#### **DISABLING AND ENABLING THE 34652**

When a negative voltage (< 1.8 V below  $V_{PWR}$ ) is applied to the DISABLE terminal for more than 1.0 ms (Point A in Figure 11), the 34652 is disabled, the Power MOSFET turns off, and the power good output signals deactivate. The 34652 stays in this state until the voltage on the DISABLE terminal is brought to within  $\pm 1.2$  V of  $V_{PWR}$  for more than 1.0 ms to enable the device (Point B in Figure 11). Then a new start-up sequence initiates as described on page 11. Applying a positive voltage (> 1.8 V above  $V_{PWR}$ ) would also disable the 34652 in the same manner.

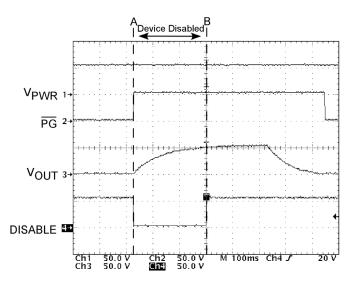


Figure 11. Disabling and Enabling the 34652

Figure 12 demonstrates that the 34652 must be enabled for the length of the start-up timer to start turning on the Power MOSFET. After the fourth disable signal, the 34652 was enabled for the length of the start-up timer. And because the retry counter is less than 10, the 34652 turns on the Power MOSFET and starts the charging process (refer to the Charging Process section, pages 11–12).

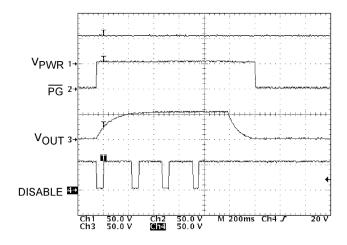


Figure 12. Start-Up Timer Versus Disable

#### **BOARD REMOVAL**

When the board is removed, its power ramps down. As soon as the 34652's input voltage reaches the undervoltage turn-off threshold, the undervoltage detection circuit activates and the Power MOSFET turns off for having violated one of the start-up conditions (list on page 11).

#### 34652 STATE MACHINE DIAGRAM

<u>Figure 13</u> is a representation of the 34652 behavior in different modes of operation.

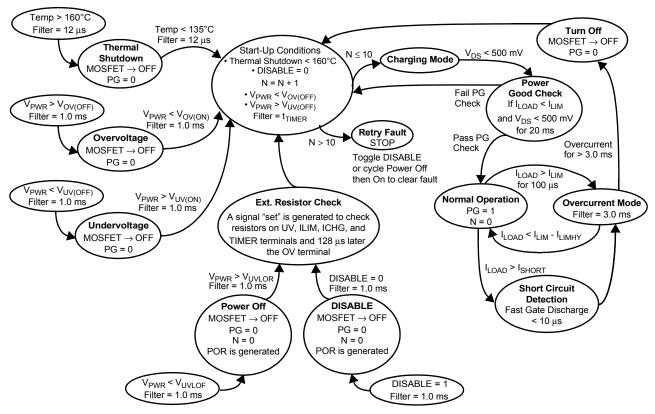
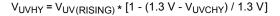


Figure 13. State Diagram

#### **PROTECTION FEATURES**

#### **UNDERVOLTAGE**

When the voltage on the UV terminal drops below the undervoltage falling threshold for more than 1.0 ms, an undervoltage fault is detected and one of the start-up conditions (list on page 11) is violated. The 34652 turns off the Power MOSFET and deactivates the power good output signals, disabling the load (Point A in Figure 14). The 34652 stays in this state until the voltage on the UV terminal rises above the undervoltage rising threshold for more than 1.0 ms, signaling that the supply voltage is in the normal operation range (Point B in Figure 14). Then a new start-up sequence initiates as described on page 11. The undervoltage detection circuit is also equipped with a 1.0 V hysteresis when in default mode. The hysteresis value depends on the undervoltage detection threshold and can be calculated as follows:



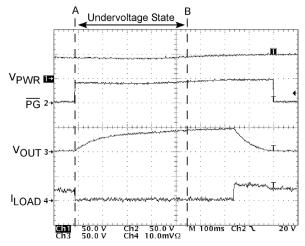


Figure 14. Undervoltage Fault Followed by a New Start-Up Sequence

Figure 15 shows how the 34652 uses the start-up timer to make sure that the input voltage is above the undervoltage falling threshold. The 34652 was in normal operation before Point A. At Point A an undervoltage fault occurs. Then the fault is cleared at Point B, and the 34652 initiates a start-up sequence. Before the end of the start-up timer another undervoltage fault occurs at Point C, so the 34652 does not turn on the Power MOSFET. At Point D the fault is cleared again for the length of the start-up timer. The 34652 turns on the Power MOSFET and starts the charging process (refer to Charging Process, pages 11–12).

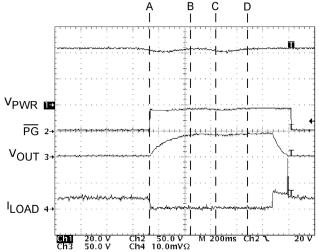


Figure 15. Start-Up Timer Protection Against Undervoltage Faults


#### **OVERVOLTAGE**

When the voltage on the OV terminal exceeds the overvoltage rising threshold for more than 1.0 ms, an overvoltage fault is detected and one of the start-up conditions (list on page 11) is violated. The 34652 turns off the Power MOSFET and deactivates the power good output signals, thus disabling the load. The 34652 stays in this state until the voltage on the OV terminal falls below the overvoltage falling threshold for more than 1.0 ms, signaling that the supply voltage is in the normal operation range. Then a new start-up sequence initiates as described on page 11.

The overvoltage detection circuit is also equipped with a 2.0 V hysteresis when in default mode. The hysteresis value depends on the overvoltage detection threshold and can be calculated as follows:

 $V_{OVHY} = V_{OV(RISING)} * [1 - (1.3 V - V_{OVCHY}) / 1.3 V]$ 

The waveforms for an overvoltage fault are shown in Figure 16, page 15.

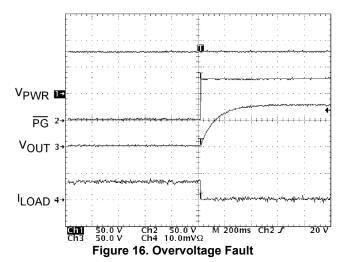

THERMAL SHUTDOWN

The thermal shutdown feature helps protect the internal Power MOSFET and circuitry from excessive temperatures. During start-up and thereafter during normal operation, the 34652 monitors the temperature of the internal circuitry for excessive heat. If the temperature of the device exceeds the thermal shutdown temperature of 160°C, one of the start-up conditions (list on page 11) is violated, and the device turns off the Power MOSFET and deactivates the power good output signals. Until the temperature of the device goes below 135°C, a new start-up sequence will not be initiated. This feature is an advantage over solutions with an external Power MOSFET, because it is not easy for a device with an external MOSFET to sense the temperature quickly and accurately. The thermal shutdown circuit is equipped with a 12 µs filter.

Thermal design is critical to proper operation of the 34652. The typical  $R_{DS(ON)}$  of the internal Power MOSFET is 0.144  $\Omega$  at room ambient temperature and can reach up to 0.251  $\Omega$  at high temperatures. The thermal performance of the 34652 can vary depending on many factors, among them:

- The ambient operating temperature (T<sub>A</sub>).
- The type of PC board—whether it is single layer or multilayer, has heat sinks or not, etc.—all of which affects the value of the junction-to-ambient thermal resistance (R<sub>θ,JA</sub>).
- The value of the desired load current (I<sub>LOAD</sub>).

When choosing an overcurrent limit, certain guidelines need to be followed to make sure that if the load current is running close to the overcurrent limit the 34652 does not go into thermal shutdown. It is good practice to set the parameters so that the resulting maximum junction temperature is below the thermal shutdown temperature by a safe margin.

Equation 1, on the following page can be used to calculate the maximum allowable overcurrent limit based on the maximum desired junction temperature or vice versa.

The power dissipation in the device can be calculated as follows:

$$P = I_{(LOAD)}^{2} * R_{DS(ON)}$$

$$OR$$

$$P = [T_{J}(max) - T_{A}(max)] / R_{AJA}$$

Combining the two equations:

$$I_{(LOAD)}^2 = [T_J(max) - T_A(max)] / [R_{\theta JA} * R_{DS(ON)}]$$
 Eq 1  
For example:

 $T_A(max) = 55^{\circ}C$ 

 $R_{\theta,JA}$  = 51°C/W for a four-layer board

 $R_{DS(ON)} = 0.251 \Omega$  at high temperatures

Then

$$I_{(LOAD)}^2 = [T_J(max) - 55^{\circ}C] / [51^{\circ}C/W * 0.251 \Omega]$$
  
 $I_{(LOAD)}^2 = [T_J(max) - 55^{\circ}C] / 12.80^{\circ}C/A^2$ 

So if the overcurrent limit is 2.0 A, then the maximum junction temperature is 106.2°C, which is well below the thermal shutdown temperature that is allowed.

The previous explanation applies to steady state power when the device is in normal operation. During the charging process, the power is dominated by the I\* V across the Power MOSFET. When charging starts, the power in the Power MOSFET rises up and reaches a maximum value of I\* V, then quickly ramps back down to the steady state level in a period governed by the size of the load's input capacitor that is being charged and by the value of the charging current limit I<sub>CHG</sub>. In this case the instantaneous power dissipation is much higher than the steady state case, but it is on for a very short time.

#### For example:

 $I_{CHG}$  = 100 mA, the default value  $C_{LOAD}$  = 400  $\mu$ F, a very large capacitor  $V_{PWR}$  = 80 V, worst case

#### Then:

The power pulse magnitude =  $I_{CHG} * V_{PWR} = 8.0 \text{ W}$ The power pulse duration =  $C_{LOAD} * V_{PWR} / I_{CHG} = 320 \text{ ms}$ 

Figure 17 displays the temperature profile of the device under the instantaneous power pulse during the charging process. Table 5 depicts thermal resistance values for different board configurations.

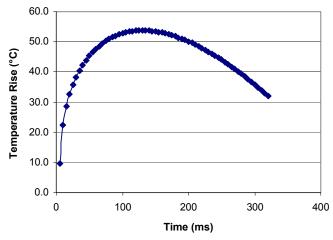


Figure 17. Instantaneous Temperature Rise of an 8.0 W

Table 5. Thermal Resistance Data

Туре	Condition	Symbol	Value	Unit
Junction to Ambient	Single-layer board (1s), per JEDEC JESD51-2 with board (JESD51-3) horizontal	$R_{\theta JA}$	103	°C/W
Junction to Ambient	Four-layer board (2s2p), per JEDEC JESD51-2 with board (JESD51-3) horizontal	$R_{\theta JMA}$	65	°C/W
Junction to Ambient	Single-layer board with a 300 mm <sup>2</sup> radiator pad on its top surface, not standard JEDEC	-	69	°C/W
Junction to Ambient	Single-layer board with a 600 mm <sup>2</sup> radiator pad on its top surface, not standard JEDEC	-	65	°C/W
Junction to Ambient	Four-layer board with a via for each thermal lead, not standard JEDEC	_	51	°C/W
Junction to Ambient	Four-layer board with a 300 mm <sup>2</sup> radiator pad on its top surface and a full array of vias between radiator pad and top surface, not standard JEDEC	_	47	°C/W
Junction to Ambient	Four-layer board with a 600 mm <sup>2</sup> radiator pad on its top surface and a full array of vias between radiator pad and top surface, not standard JEDEC	_	47	°C/W
Junction to Board	Thermal resistance between die and board per JEDEC JESD51-8	$R_{\theta JB}$	29	°C/W
Junction to Case	Thermal resistance between die and case top	$R_{\theta JC}$	33	°C/W
Junction to Package Top	Temperature difference between package top and junction per JEDEC JESD51-2	$\Psi_{JT}$	12	°C/W
Junction to Lead	Thermal resistance between junction and thermal lead, not standard JEDEC	$R_{\theta JL}$	33	°C/W

#### **TYPICAL APPLICATIONS**

The 34652 resides on the plug-in board (see Figures 18 and 19), allowing the board to be safely inserted or removed without damaging electrical equipment. The 34652 can be operated with no external components other than the power good output signal pull-up resistor if the default mode was selected for all the programmable features. This is one of the great advantages of the 34652: it operates with minimal user interface and minimal external component count and still offers complete hot swapping functionality with all the necessary protection features, from undervoltage/ overvoltage detection, to current limiting, to short circuit protection and power good output signaling. The default values were chosen to be sufficient for many standard applications.

<u>Figure 18</u> is a typical application diagram depicting the default mode and using the power good output signal pull-up resistor. Refer to the static and dynamic electrical characteristics tables on <u>pages 5</u> through <u>8</u> for the various default values.

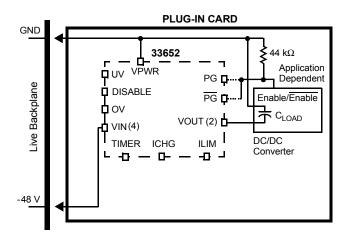


Figure 18. Typical Application Diagram with Default Settings and Minimal External Components

The 34652 can be also programmed for different values of the Overcurrent Limit, the Charging Current Limit, the Start-Up and Retry Delay Timer, and the UV/OV detection thresholds using external components connected to the device. Figure 19 shows the 34652 with the required external components that allow access to all programmable features in the device.

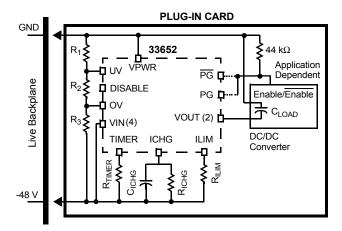


Figure 19. Typical Application Diagram with External Components Necessary to Program the Device

# UNDERVOLTAGE AND OVERVOLTAGE DETECTION

The UV and OV terminals are used to monitor the input voltage to ensure that it is within the operating range and that there are no overvoltage or undervoltage conditions, and to quickly turn off the Power MOSFET if there are. The terminals are connected to internal comparators that compare the voltages at the UV and OV terminals with a reference voltage. The UV and OV terminals can be left unconnected for the default threshold values of their trip point or the user can set the threshold values externally with a simple voltage divider using resistors between VPWR and VIN (resistors R<sub>1</sub>, R<sub>2</sub>, and R<sub>3</sub> in Figure 19). For the default mode, the 34652 is equipped with an internal resistor divider that acts the same as the external one. The typical default values of 37 V for the UV turn-off threshold (falling threshold) and 78 V for the OV turn-off threshold (rising threshold) will give a typical operating range of 38 V to 76 V. This range is suitable for telecom industry standards.

When the device passes the UVLO threshold, it checks if there is any external resistor divider connected to the OV and UV terminals. If there is, it determines the value of the UV/OV thresholds accordingly. If there is not, it defaults to the internal resistor divider. It then uses the UV/OV detection circuits to check the input supply levels before turning on the Power MOSFET during the Start-Up Timer delay and thereafter. As long as the voltage on the UV terminal is above its falling threshold and the voltage on the OV terminal is below its rising threshold, the supply is within operating range and the Power MOSFET is allowed to turn on and stay on. If the UV terminal drops below its falling threshold or the OV terminal rises above its rising threshold, then one of the start-up conditions (refer to page 11 for list) is violated and the Power MOSFET turns off, the power good signals deactivate,

and a new start-up timer initiates. The UV and OV detection circuits are equipped with a 1.0 ms filter to filter out momentary input supply dips. Filter capacitors between the UV and VIN terminals and between the OV and VIN terminals could also be added to adjust the UV/OV filter time and prevent more transients from affecting the device's operation, especially if the input supply has a lot of noise.

#### **Guidelines for Choosing Resistor Divider Values**

The total current flowing in the resistors is equal to the supply voltage divided by the total series resistance. The supply voltage can reach up to 80 V and the device will still be in normal operation, the resistors connected and drawing current. So the resistor values should be chosen high enough to allow for a reasonable current to pass through them and not dissipate a lot of power or cause input noise that would trip the UV/OV detection circuit.

Another consideration is whether or not the values of the resistors are readily available. The tolerance of the resistors should be 1% or better to get an accurate reading.

**Note** Accuracy requirements are application dependent.

To demonstrate the importance of the accuracy of the resistors, let's look at a system with an operating range of 40 V for UV falling to 75 V for OV rising as an example. This operating range will be scaled down for the device's internal circuitry to operate the UV/OV detection circuits. The scale factor is 31.6 for UV and 57.1 for the OV. Taking overvoltage as an example, this means that every 5.0 mV change on the OV terminal represents a 0.29 V change for the OV trip point on the supply. Which says that an error of 5.0 mV due to the resistors not being accurate will result in an error of 0.29 V for the trip point, and depending on how close we are operating to the OV rising threshold the device might detect an OV condition and turn off the Power MOSFET prematurely. The same argument applies to the UV terminal.

#### **Example of Calculations for Resistor Values**

The following equations are examples of calculating resistor values using the same operating range as in the previous paragraph:

$$R_3 = 1.3 * R_1 * V_{UV(RISING)} / (V_{OV(RISING)} (V_{UV(RISING)} - 1.3))$$

$$R_2 = R_3 (V_{OV(RISING)} / V_{UV(RISING)} - 1)$$

Where  $V_{OV(RISING)} = 75 \text{ V}$  and  $V_{UV(RISING)} = 41 \text{ V}$ 

**Note** Some iteration may be required to get the right values and also standard resistor values. The recommended maximum value of the series resistance between the UV/OV terminals and VPWR terminal is 500 k $\Omega$ .

Here we have two equations and three unknowns. If we select a value for  $R_1$  of 487  $k\Omega,$  then from the first equation:

$$R_3 = 8.72 \text{ k}\Omega$$

and the closest 1% standard resistor value is 8.66 k $\Omega$ . Now, from the second equations we can solve for R<sub>2</sub>:

$$R_2 = 7.18 \text{ k}\Omega$$

and the closest 1% standard resistor value is 7.15 k $\Omega$ .

If the three-resistor divider, which is the recommended approach, could not produce acceptable resistor values, the user can consider two separate resistor dividers, one divider for each terminal from VPWR to VIN. An advantage of the two-resistor dividers approach is that the user can set the trip points of the UV and OV thresholds independently.

#### **TIMER**

The TIMER terminal on the 34652 gives the user control over the time base used to generate the timing sequences at start-up. The same timer controls the retry delay when the device experiences any fault. The TIMER terminal can be left unconnected for a default timer value of 200 ms or the user can connect an external resistor ( $R_{TIMER}$ ) between the TIMER and VIN terminals, as shown in Figure 19, page 17, to set the timer value externally.

After the device passes the UVLO threshold and continuously after that, the 34652 checks the TIMER terminal for any external components to determine the value of the timer. During start-up and if any fault occurred, this timer value is used when initiating a start-up sequence.

#### Choosing the External Resistor R<sub>TIMER</sub> Value

The user can change the value of the Start-Up Delay Timer ( $t_{TIMER}$ ) by adding a resistor ( $R_{TIMER}$ ) between the TIMER and VIN terminals, as shown in Figure 19, page 17. The timer value ranges between 100 ms and 1000 ms, with a default value of 200 ms. Table 6 lists examples of  $R_{TIMER}$  for different values of the  $t_{TIMER}$  and Figure 20, page 19, shows a plot of  $R_{TIMER}$  versus  $t_{TIMER}$ . It is recommended that the closest 1% standard resistor value to the actual value be chosen

Note Accuracy requirements are application dependent.

To calculate the value of the R<sub>TIMER</sub> resistor we use the following equations:

$$t_{TIMER}(ms) = 20 (ms) + 2.0 * [R_{TIMER}(k\Omega) + 1.0 k\Omega]$$
  
 $R_{TIMER}(k\Omega) = [t_{TIMER}(ms) - 20 (ms)] / 2.0 - 1.0 k\Omega$ 

Table 6. R<sub>TIMER</sub> Values for Some Desired t<sub>TIMER</sub> Values

t <sub>TIMER</sub> (ms)	$R_{TIMER}(k\Omega)$	t <sub>TIMER</sub> (ms)	$R_{TIMER}(k\Omega)$
100	39	600	289
150	64	650	314
200	89	700	339
250	114	750	364
300	139	800	389
350	164	850	414
400	189	900	439
450	214	950	464
500	239	1000	489
500	264	_	_

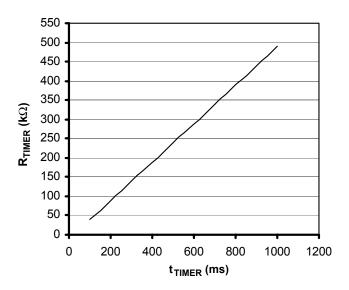


Figure 20. External Resistor (R<sub>TIMER</sub>) Value Versus Start-Up and Retry Delay Timer Value (t<sub>TIMER</sub>)

#### **POWER GOOD OUTPUT SIGNALS**

The power good terminals PG and  $\overline{PG}$  are output terminals that are used to directly enable a power module load. The device has active high and active low power good output signals. Choosing which power good active signal depends on the Enable signal requirement of the load. This feature allows the 34652 to adapt to different applications and a wide variety of loads.

The power good output signal is active if the Power MOSFET is fully enhanced and the device is in normal operation. The signal goes active after a typical 20 ms delay. The signal deactivates if one of the following occurs:

- · Power is turned off.
- The device is disabled for more than 1.0 ms.
- The device exceeded its thermal shutdown threshold for more than 12 us.
- The device is in overvoltage or undervoltage mode for more than 1.0 ms.
- Load current exceeded the overcurrent limit for more than 3.0 ms.

When the power good output signal becomes inactive, it disables the load, protecting it from any faults or damage. These loads are usually DC/DC converters, depicted in Figure 19, page  $\underline{17}$ . An LED can also be connected to  $\overline{PG}$  to indicate that the power is good.

The PG and  $\overline{PG}$  terminals are referenced to VIN and require a pull-up resistor connected to VPWR (<u>Figures 18</u> and 19, page 17).

#### **DISABLING AND ENABLING THE 34652**

The Disable control input (DISABLE) provides two functions:

- · External enable/disable control.
- Manual resetting of the device and the retry counter after a fault has occurred.

Using the DISABLE terminal, a user can enable/disable the 34652 device, which facilitates easy access to connect the load to or disconnect it from the main power rail.

When power is first applied, the DISABLE terminal must be inactive in order for the 34652 to initiate a start-up sequence. If the DISABLE terminal is active, the device makes no further steps until the terminal is inactive. If the DISABLE terminal is activated at any point during the start-up and thereafter during normal operation, then the retry counter resets, the Power MOSFET turns off, and the power good output signals deactivate. The DISABLE circuit is equipped with a 1.0 ms filter to filter out any glitches or transients on the DISABLE input and prevent the Power MOSFET from turning off prematurely.

The DISABLE terminal is referenced to VPWR. If left open or connected to VPWR, meaning the voltage at the DISABLE terminal is between  $V_{PWR}$  + 1.2 V and  $V_{PWR}$  - 1.2 V, it is inactive and the device is enabled. If a positive voltage (1.8 V above  $V_{PWR}$ ) or a negative voltage (1.8 V below  $V_{PWR}$ ) is applied to DISABLE, it is active and the device is disabled.

#### **CHARGING CURRENT LIMIT**

When the device passes the UVLO threshold, it checks if there is any external resistor or external capacitor connected to the ICHG terminal. If there is, then it determines the value of the charging current limit value and the charging current limit rise time accordingly. If there is not, it uses the default charging current limit value of 100 mA and rise time of 1.0 ms.

**Note** Users are allowed to connect an external capacitor to the ICHG terminal only if an external resistor is also connected. During the external components' check, a capacitor produces an impulse of current and an external resistor will be detected, even it the external resistor is absent.

When the Power MOSFET is turned on, the current limit is set gradually from 0 A to  $I_{CHG}$ . This current charges up the load capacitor relatively slowly. When the load capacitor is fully charged, the Power MOSFET reaches its full enhancement, which triggers the current limit to change from  $I_{CHG}$  to  $I_{LIM}$  and the load current to decrease. The power good output signals activate after a 20 ms delay, which in turn enables the load. The 34652 is now in normal operation mode and the retry counter resets.

The low charging current value of  $I_{CHG}$  is intended to limit the temperature increase during the load capacitor charging process, and the gradual rise to  $I_{CHG}$  is to prevent transient dips in the input voltage due to sharp increases in the limit current. This prevents the input voltage from drooping due to current steps acting on the input line inductance, and that in turn prevents a premature activation of the UV detection circuit.

#### Choosing the External Resistor R<sub>ICHG</sub> Value

The user can change the value of the charging current limit by adding a resistor ( $R_{ICHG}$ ) between the ICHG and VIN terminals, as shown in Figure 19, page 17. The charging current value ranges between 50 mA and 500 mA, with a default value of 100 mA. Table 7 lists examples of  $R_{ICHG}$  for different values of  $I_{CHG}$  and Figure 21 shows a plot of  $R_{ICHG}$  versus  $I_{CHG}$ . It is recommended that the closest 1% standard resistor value to the actual value be chosen.

**Note** Accuracy requirements are application dependent.

To calculate the value of the R<sub>ICHG</sub> resistor we use the following equations:

$$I_{CHG}(A) = [R_{ICHG}(kΩ) + 1.4 kΩ] / 335$$
  
 $R_{ICHG}(kΩ) = 335 * I_{CHG}(A) - 1.4 kΩ$ 

Table 7. R<sub>ICHG</sub> Values for Some Desired I<sub>CHG</sub> Values

I <sub>CHG</sub> (A)	$R_{ICHG}(k\Omega)$
0.05	15.35
0.1	32.10
0.15	48.85
0.2	65.60
0.25	82.35
0.3	99.10
0.35	115.85
0.4	135.60
0.45	149.35
0.5	166.10

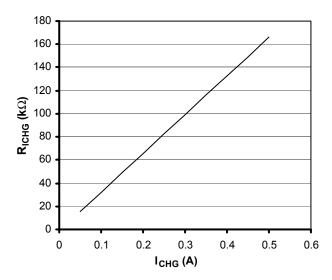


Figure 21. External Resistor (R<sub>ICHG</sub>) Value Versus Charging Current Limit Value (I<sub>CHG</sub>)

#### Choosing the External Capacitor CICHG Value

The user can also change the charging current rise time by adding a capacitor ( $C_{ICHG}$ ) between the ICHG and VIN terminals, as shown in <u>Figure 19</u>, page <u>17</u>. The charging current rise time ranges between 1.0 ms (default value) and a recommended maximum of 10 ms. <u>Table 8</u> lists examples of  $C_{ICHG}$  for different values of  $t_{ICHGR}$  and <u>Figure 22</u> shows a plot of  $C_{ICHG}$  versus  $t_{ICHGR}$ .

To calculate the value of the  $C_{\text{ICHG}}$  capacitor we use the following equation:

$$C_{ICHG}(nF) = 1000 * t_{ICHGR}(ms) / [3 * R_{ICHG}(k\Omega)]$$

Table 8.  $C_{ICHG}$  Values for Some Desired  $t_{ICHGR}$  Values at a Specific  $I_{CHG}$  Value

t <sub>ICHGR</sub> (ms)	C <sub>ICHG</sub> (nF) I <sub>CHG</sub> = 0.05 A	C <sub>ICHG</sub> (nF) I <sub>CHG</sub> = 0.1 A	C <sub>ICHG</sub> (nF) I <sub>CHG</sub> = 0.5 A
1.0	21.72	10.38	2.01
2.0	43.43	20.77	4.01
3.0	65.15	31.15	6.02
4.0	86.86	41.54	8.03
5.0	108.58	51.92	10.03
6.0	130.29	62.31	12.04
7.0	152.01	72.69	14.05
8.0	173.72	83.07	16.05
9.0	195.44	93.46	18.06
10	217.16	103.84	20.07

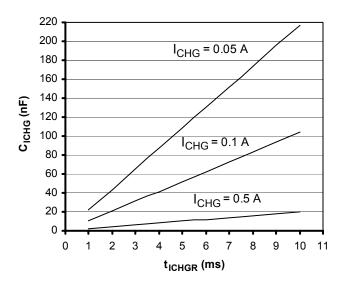


Figure 22. Charging Current External Capacitor (C<sub>ICHG</sub>) Versus Charging Current Rise Time (t<sub>ICHGR</sub>)

#### **OVERCURRENT LIMIT**

When in normal operation mode, the 34652 monitors the load and compares (with a hysteresis) the current going through a Sensor MOSFET with a reference current value generated in reference to the current limit value I<sub>I IM</sub>. If the current going through the Sensor MOSFET becomes larger than the reference current for more than 100 µs, the overcurrent signal is asserted, the gate of the Power MOSFET is discharged fast (in less than 10 us) to try to regulate the current, and the 34652 is in overcurrent mode for 3.0 ms. If after a 3.0 ms filter time the device is still in overcurrent mode, the device turns off the Power MOSFET and deactivates the power good output signals. The 34652 then initiates another start-up timer and goes back through the enhancement process. If during the 3.0 ms timer the fault was cleared where the load current was less than  $I_{LIM}$  minus the hysteresis value, which is 12% of I<sub>LIM</sub> value, then the 34652 goes back to the normal operation mode and the power good output signals stay activated. This way the device overcomes temporary overcurrent situations and at the same time protects the load from more severe overcurrent situations.

When the device passes the UVLO threshold, it checks if there is any external resistor connected to the ILIM terminal. If there is, it determines the value of the overcurrent limit. If there is not, it uses the default overcurrent limit value of 1.0 A. It then uses the Sensor MOSFET to monitor the load for any overcurrent conditions during operation as explained in the previous paragraph.

#### Choosing the External Resistor $R_{\text{ILIM}}$ Value

The user can change the current limit by adding a resistor ( $R_{\rm ILIM}$ ) between the ILIM and VIN terminals, as shown in Figure 19, page 17. This way the 34652 device is adaptable

to different requirements and operating environments. The overcurrent value ranges between 0.15 A and 2.25 A, with a default value of 1.0 A. Table 9 lists examples of  $R_{\rm ILIM}$  for different values of  $I_{\rm LIM}$  and Figure 23 shows a plot of  $R_{\rm ILIM}$  versus  $I_{\rm LIM}$ . It is recommended that the closest 1% standard resistor value to the actual value be chosen.

Note Accuracy requirements are application dependent.

To calculate the value of the R<sub>ILIM</sub> resistor we use the following equations:

$$I_{LIM}(A) = 129 / [R_{ILIM}(k\Omega) + 1.4 k\Omega]$$
  
 $R_{ILIM}(k\Omega) = [129 / I_{LIM}(A)] - 1.4 k\Omega$ 

Table 9. R<sub>ILIM</sub> Values for Some Desired I<sub>LIM</sub> Values

I <sub>LIM</sub> (A)	$R_{ILIM}(k\Omega)$	I <sub>LIM</sub> (A)	$R_{ILIM}(k\Omega)$
0.15	859.71	1.3	97.96
0.2	644.43	1.4	90.86
0.3	429.15	1.5	84.71
0.4	321.52	1.6	79.33
0.5	256.93	1.7	74.58
0.6	213.88	1.8	70.36
0.7	183.12	1.9	66.58
0.8	160.06	2.0	63.18
0.9	142.12	2.1	60.11
1.0	127.77	2.2	57.31
1.1	116.02	2.25	56.01
1.2	106.24	_	_

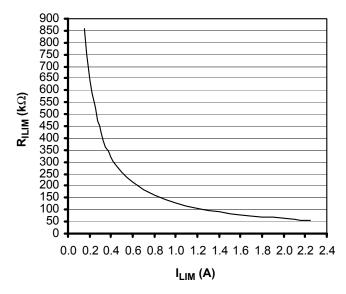


Figure 23. External Resistor (R<sub>ILIM</sub>) Value Versus Current Limit Value (I<sub>LIM</sub>)

34652

#### SHORT CIRCUIT DETECTION

If the current going through the load becomes >5.0 A, the Power MOSFET is discharged very fast (in less than 10  $\mu$ s) to try to regulate the current, and the 34652 is in the overcurrent mode for 3.0 ms. Then it follows the pattern outlined in the <u>Overcurrent Limit</u> paragraph above.

#### POWER MOSFET ENERGY CAPABILITY

Figure 24 shows a projected energy capability of the device's internal Power MOSFET under a drain to source voltage of 82 V and an ambient temperature of 90°C. It is compared to the energy levels required for the capacitive loads of 100  $\mu F, 200~\mu F,$  and 400  $\mu F$  at 80 V for the discharge periods of 16 ms, 32 ms, and 64 ms, respectively. It is clear that the Power MOSFET well exceeds the required energy capability for all three cases with a sufficient margin. For example, the 400  $\mu F$  capacitor load with a 64 ms discharge time requires an energy capability of about 1540 mJ, which is well below the Power MOSFET capability of about 3500 mJ. As a result of this analysis, the 33652 is expected to more than meet all energy capability requirements for the possible capacitive loads.


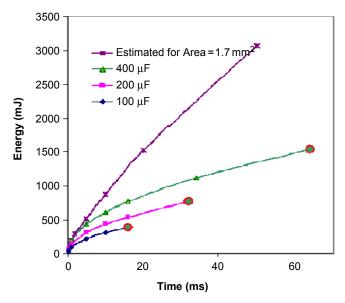


Figure 24. Projected Energy Capability of the Power MOSFET Compared to the Required Energy Levels of

#### **PACKAGE DIMENSIONS**

**Important** For the most current revision of the package, visit www.freescale.com and perform a keyword search on the "98A" drawing number below:

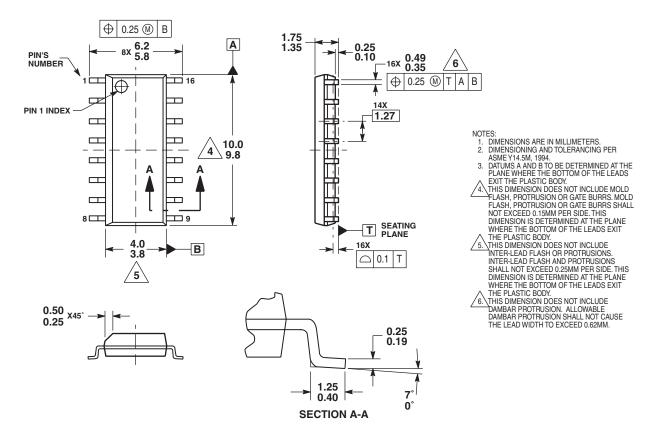

# EF SUFFIX (Pb-Free) 16-TERMINAL SOIC NARROW BODY PLASTIC PACKAGE 98ASB42566B

ISSUE K

## **REVISION HISTORY**

REVISION	DATE	DESCRIPTION OF CHANGES
6.0	2/2006	Changed Document Order No.

#### How to Reach Us:

#### **Home Page:**

www.freescale.com

support@freescale.com

#### **USA/Europe or Locations Not Listed:**

Freescale Semiconductor Technical Information Center, CH370 1300 N. Alma School Road Chandler, Arizona 85224 +1-800-521-6274 or +1-480-768-2130 support@freescale.com

**Europe, Middle East, and Africa:** Freescale Halbleiter Deutschland GmbH Technical Information Center Schatzbogen 7 81829 Muenchen, Germany +44 1296 380 456 (English) +46 8 52200080 (English) +49 89 92103 559 (German) +33 1 69 35 48 48 (French) support@freescale.com

Freescale Semiconductor Japan Ltd. Headquarters ARCO Tower 15F 1-8-1, Shimo-Meguro, Meguro-ku, Tokyo 153-0064 Japan 0120 191014 or +81 3 5437 9125 support.japan@freescale.com

#### Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd. **Technical Information Center** 2 Dai King Street Tai Po Industrial Estate Tai Po, N.T., Hong Kong +800 2666 8080 support.asia@freescale.com

#### For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center P.O. Box 5405 Denver, Colorado 80217 1-800-441-2447 or 303-675-2140 Fax: 303-675-2150 LDCForFreescaleSemiconductor@hibbertgroup.com

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics of their non-RoHS-compliant and/or non-Pb-free counterparts. For further information, see http://www.freescale.com or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, go to http:// www.freescale.com/epp.

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc., 2006. All rights reserved.

