




$P_C - T_a$

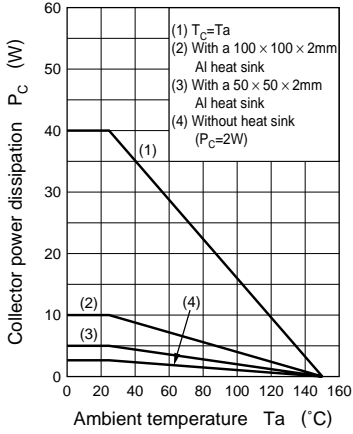


$I_C - V_{CE}$

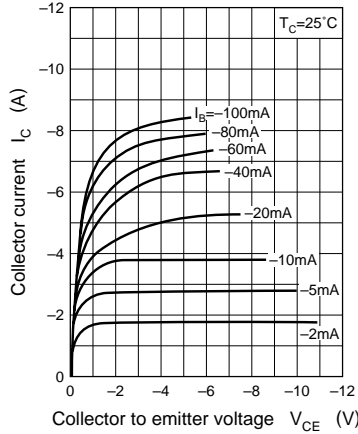


$I_C - V_{BE}$

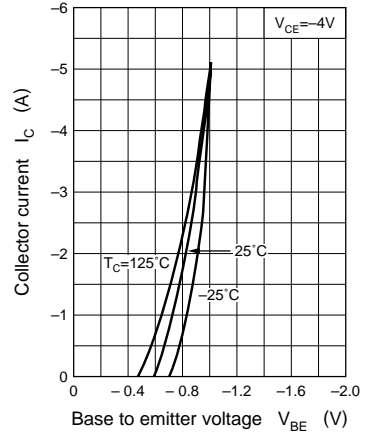


$V_{CE(sat)} - I_C$

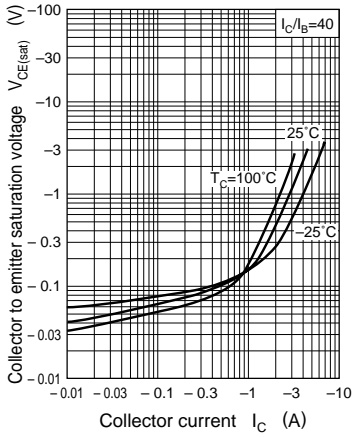


$h_{FE} - I_C$

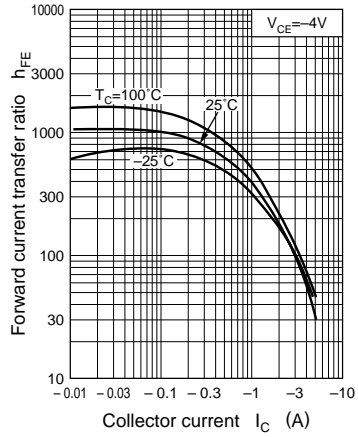


$f_T - I_C$

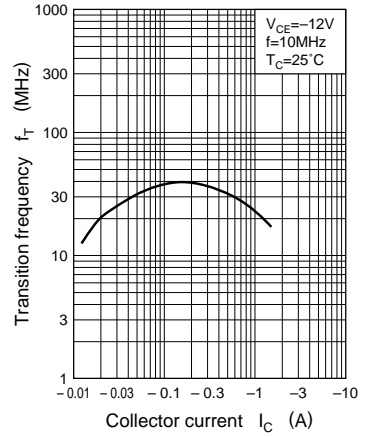


$C_{ob} - V_{CB}$

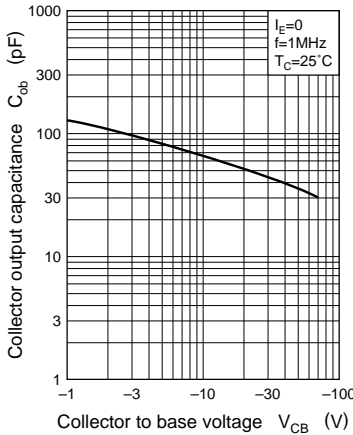

$t_{on}, t_{stg}, t_f - I_C$

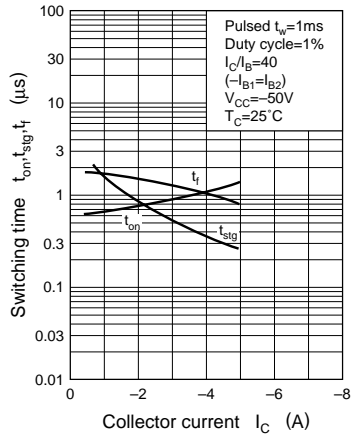

Area of safe operation (ASO)

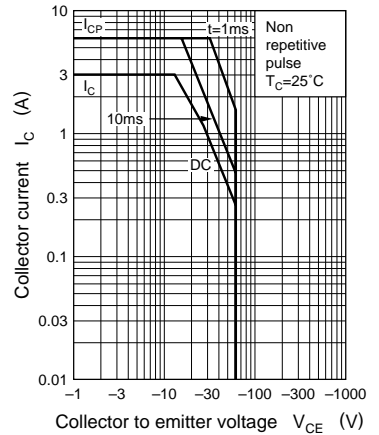

$$R_{th(t)} - t$$

